
User Manual of Fog Machine

1 Operation Interface

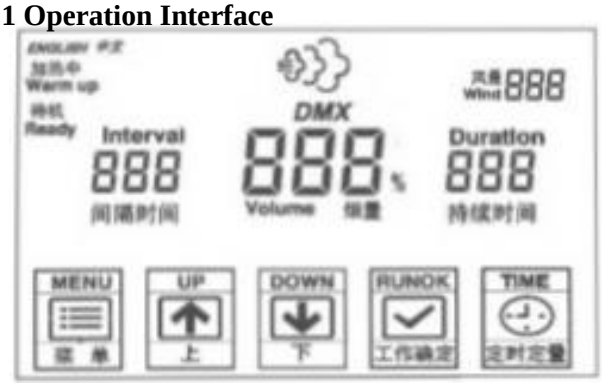

Our f og machine includes a LCD display and 5 touch ke ys. Besides, it integrates DMX512. The operation Interface co nsist of “Tips Zone”.“ Edit Zone” and “TouchKey Zone”.



1. 1 Touch Key Zone

1. 1. 1 ： Click' Menu', modes circle: dmx-> Volume-> Wind-> Interval-> Duration-> Language -> Manual.

1. 1. 2 ： When it's not under the mode" Manual", click"OK", we can enter" Manual".

1. 1. 3 ： When it's under " Manual", click"OK", we can start or stop the maching.

1. 1. 4 ： When it 's under " Manual", click" Time", the machine will enter TIMER MODE. In this mode, the machine will work follow the “ Duration” and “ Interval”.

1.2 ： Tips Zone



中文/**ENGLISH**: Indicate current language. Chinese or English.

加热中/ **Warmup**：When the temperature of the heater inside the machine is low, the heater will be warmed up. This icon will appear.

待机/ **Ready**: Indicate current temperature is OK.

烟雾图标**(Fog Icon)**： When working, these 3 icons is active.

1.3：Edit Zone



风量/ **Wind**: Adjust the wind power, from 0 to 100.

间隔时间/ **Interval**: Adjust the interval for TIMER MODE.

持续时间/ **Duration**：Adjust the duration for TIMER MODE.

DMX: Adjust the address for DMX512 communication.

Volume ： Adjust the address for Fog power.

2. DMX Channel Tables

Channel	Value	Function
CH1	0-255	Adjust the power of pump
CH2	0-255	Adjust the power of wind

DMX512 is highest priority. When the DMX signal is detected, the machine enter DMX MODE automatically.